


core X₂®


The CoreX2 DIY effects connection kit is designed for purity of sound delivery. The instructions below will explain the correct way to make your connections.

Step 1

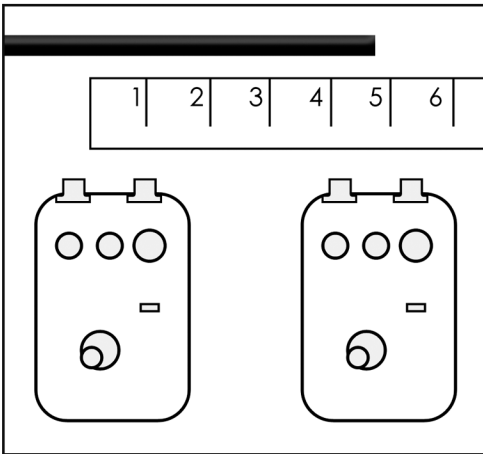


Measure your connection length using the marks on the cable or with a ruler/tape measure. The connection distance should be as straight as possible.

Step 2

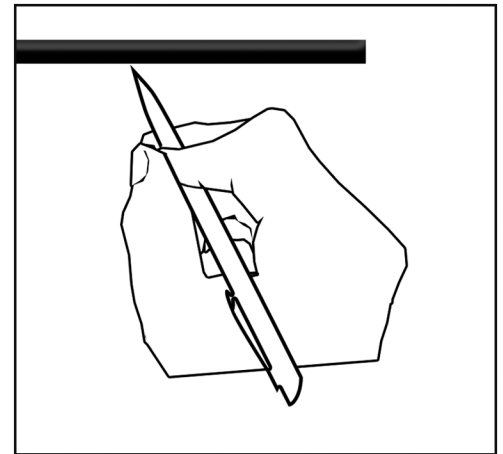


Mark - The shorter the cable the better frequency you will have. At the same time do not put undo stress on them by making the connections to tight. This could strain the connectors as well.

Step 3

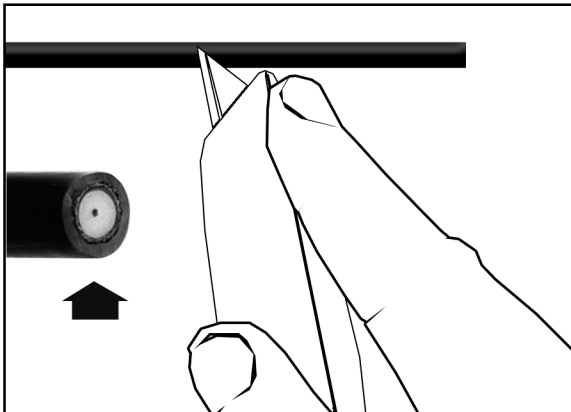

Place the cable on a cutting board or other flat surface. Cut using the cutter provided **DO NOT** use scissors or wire cutters. Make a straight clean cut from top to bottom with the blade.


Step 4

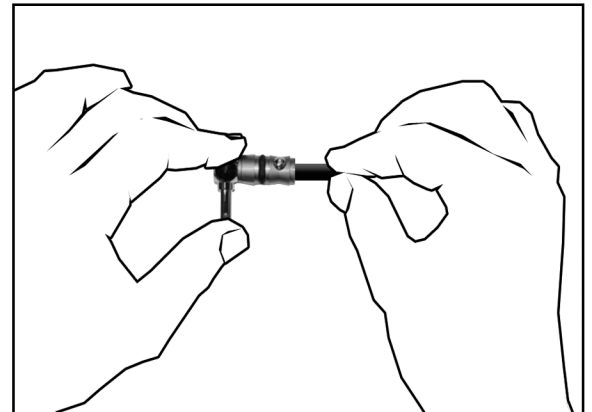

Release the grounding screw all the way before you insert the cable! Push the cable in until it cannot go in any further. It is very important that this cable be touching the back of the connector. It must have good contact with the positive spike inside.

Step 5

Turn the grounding screw clockwise with the allen wrench provided until it is snug. Do not overtighten.

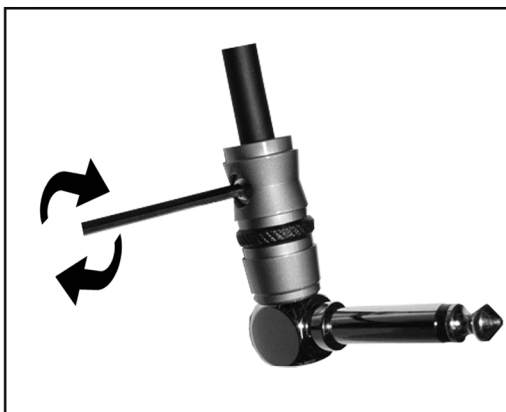

The cables are now ready to connect. Never pull the cables out using the cable always use the connector. Store cables in a dry place and keep them clean. Dropping the cables may damage the connectors.

If you have any questions or comments please e-mail us at info@coreoneproduct.com

core one creative coreoneproduct.com